

UPUTSTVO INSTRUCTIONS




PRANJE

Wash Instruction

- 1 Ubaci veš u mašinu
zatvori vrata (do 10kg)**
Put the laundry in the machine
and close the door (up to 10 kg)
- 2 Ubaci 3 žetona u žetonjeru**
Insert coins into the coin acceptor
- 3 Odaberi program za pranje**
Select a washing program
- 4 Pritisni START**
Press START

SUŠENJE

Dry Instruction

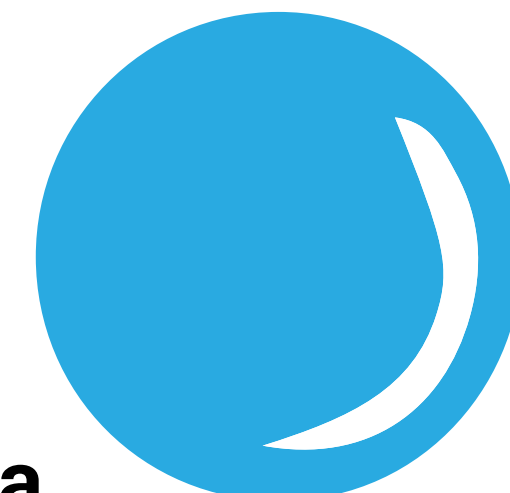

- 1 Ubaci veš u mašinu za
sušenje i zatvori vrata**
Put the laundry in the machine
and close the door
- 2 Ubaci 3 žetona u žetonjeru**
Insert coins into the coin acceptor
- 3 Odaberi program sušenja**
Select the drying program
- 4 Pritisni START**
Press START


**DETERDŽENT, OMEKŠIVAČ
I SREDSTVO ZA DEZINFEKCIJU
SE DOZIRAJU AUTOMATSKI**

DETERGENT, SOFTENER AND
DISINFECTANT ARE DOSED
AUTOMATICALLY

1 žeton = 20 min sušenja
1 coin = 20 minutes of drying

**Vreme sušenja zavisi od količine,
vrste materijala i temperature na
kojoj se veš suši.**

Drying time depends on the amount,
type of material and temperature at
which the laundry is dried.

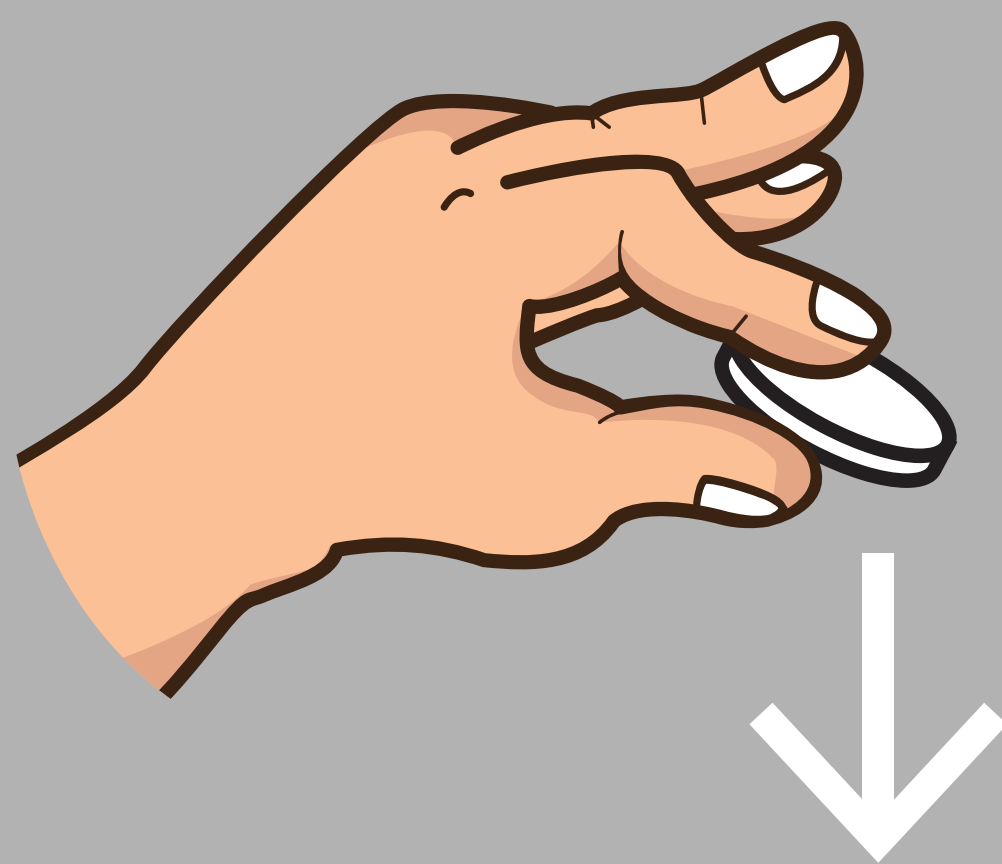

**PAŽLJIVO UBACITE ŽETONE
(NE GURATI)
GENTLY INSERT COINS
(DO NOT PUSH)**