

# UPUTSTVO INSTRUCTIONS



## PRANJE

Wash Instruction

- 1** Ubaci veš u mašinu  
zatvori vrata (do 10kg)  
Put the laundry in the machine  
and close the door (up to 10kg)
- 2** Ubaci 4 žetona u žetonjeru  
Insert 4 coins into the coin acceptors
- 3** Odaberi program za pranje  
Select a washing program
- 4** Pritisni START  
Press START

## SUŠENJE

Dry Instruction



- 1** Ubaci veš u mašinu za  
sušenje i zatvori vrata  
Put the laundry in the machine  
and close the door
- 2** Ubaci žeton u žetonjeru  
Insert coin into the coin acceptor
- 3** Odaberi program sušenja  
Select the drying program
- 4** Pritisni START  
Press START

DETERDŽENT, OMEKŠIVAC  
I SREDSTVO ZA DEZINFEKCIJU  
SE DOZIRAJU AUTOMATSKI


DETERGENT, SOFTENER AND  
DISINFECTANT ARE DOSED  
AUTOMATICALLY

1 žeton = 20 min sušenja

1 coin = 20 minutes of drying

Vreme sušenja zavisi od količine,  
vrste materijala i temperature na  
kojoj se veš suši.

Drying time depends on the amount,  
type of material and temperature at  
which the laundry is dried.

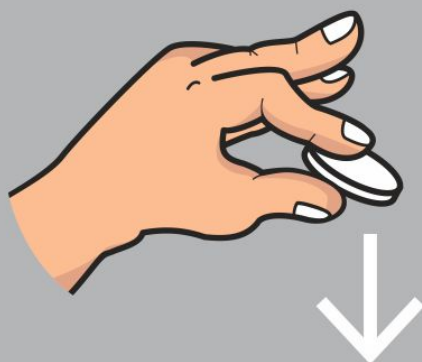

PAŽLJIVO UBACI ŽETONE  
(NE GURAJ)  
GENTLY INSERT COINS  
(DO NOT PUSH)